

---

## TRANSLATION OF ORIGINAL OPERATING AND INSTRUCTION MANUAL SMART OVENS

MKF 464 S- MKF 416 S - MKF 511 S – MKF 516 S  
MKF 664 S – MKF 664 SP – MKF 621 S – MKF 616 S - – MKF 664 SP –  
MKF 711 S – MKF 716 S – MKF 1064 S – MKF 1021 S – MKF 1016 S  
MKF 1111 S - MKF 1664 S – MKF 2011 S





Tecnoeka srl

via Marco Polo, 11  
35010 Borgoricco  
Padova - Italy

tel. +39.049.5791479

tel. +39.049.9300344

info@tecnoeka.com

tecnoekasrl@pec.it

tecnoeka.com

cod. fisc. - p.iva 00747580280

rea n. 133205

reg. a.e.e. n. IT08020000001275

cap. soc. euro 119.000,00 I.V.



# EU DECLARATION OF CONFORMITY

Annex II A, of Directive 2006/42/EC

Manufacturer's name	TECNOEKA Srl
Manufacturer's address	Via Marco Polo, 11 - 35010 Borgoricco (PD)
Name of the person in charge of the technical file	Imazio Oscar
Address of the person in charge of the technical file	Via Marco Polo, 11 - 35010 Borgoricco (PD)
Product type	Electric oven
Purpose of the product	Cooking food
Model	MKF 464 S - MKF 416 S - MKF 511 S - MKF 516 S MKF 664 S - MKF 664 SP - MKF 621 S - MKF 616 S - MKF 616 SP - MKF 711 S - MKF 716 S - MKF 1064 S - MKF 1021 S - MKF 1016 S - MKF 1111 S - MKF 1664 S - MKF 2011 S
s/n	

TECNOEKA Srl declares that the above mentioned products comply with all provisions pertaining to the following directives:

Machinery directive 2006/42/EC;

Electromagnetic compatibility 2014/30/EU;

TECNOEKA Srl declares that the above mentioned products comply with the following harmonised directives:

EN 60335-1 ; EN 60335-2-42

EN 55014-1 ; EN 55014-2 ; EN 61000-3-2 ; EN 61000-3-3 ;

EN 62233

TECNOEKA Srl declares that the above-mentioned products also comply with the following directives:

General product safety directive 2001/95/EC;

Directive restricting the use of hazardous substances in electrical and electronic equipment 2011/65/EU;

Directive on waste electrical and electronic equipment 2012/19/EU.

TECNOEKA Srl declares that the above mentioned products comply with Regulation (EC) 1907/2006

TECNOEKA Srl declares that the above mentioned products comply with Regulation (EC) 1935/2004

Borgoricco, 16/05/2022.

  
Signature of the Board Representative (Lora Cristina)

## CONTENTS

1. SERVIZIO TECNICO (TECHNICAL SERVICE)	6
2. INSTRUCTIONS FOR THE USER	7
2.1 Control panel	7
2.2 Wheeled models (mod. MKF 1664 S - MKF 2011 S)	8
2.3 Baking	10
3. CLEANING	10
3.1 Manual cooking chamber cleaning	10
3.2 Semi-automatic cooking chamber cleaning	10
3.3 Cleaning the fans	10
3.4 Cleaning the door gasket	10
3.5 Cleaning the door	10
3.6 Cleaning the external casing	11
3.7 Inactivity period	11
4. TROUBLESHOOTING	11
5. TECHNICAL SUPPORT	11
6. DISPOSAL OF THE APPLIANCE	12
7. CONVENTIONAL WARRANTY	12
8. AVAILABILITY AND SUPPLY OF SPARE PARTS	13
9. APPLICABLE LAW AND COMPETENT COURT	13

## GENERAL INFORMATION

It is essential for this instruction manual to be stored together with the appliance for future referencing; in the event of misplacing it, a copy must be obtained directly from the manufacturer. This information has been prepared for your safety and that of others.

Therefore, we kindly ask you to read it carefully before installing and using the appliance.

If upon reception of the goods the packaging should not be intact or should it be damaged, affix the following wording: "GOODS SUBJECT TO CHECK", with the specification of the damage and countersigned by the driver; file a written complaint with the vendor within 4 calendar days (not business days) from the date of delivery, after which no complaints shall be accepted.

For periodic maintenance checks and repairs, contact your nearest Technical Support Centre and only use original spare parts. Failure to comply with this provision shall forfeit the warranty right

The "technical data" plate is located on the side panel of the appliance.

A periodic check (at least once a year) of the appliance contributes to extending its service life and assures proper operation.

Any maintenance operation on the appliance must only be done by highly qualified personnel trained in the operations to be performed.

Before performing any maintenance on the appliance, the power supply must be disconnected (act on the safety magnetic circuit breaker located upstream of the appliance) and let it cool down.


The components that might require maintenance are all accessible by removing the left side and back of the appliance.

**The inappropriate or incorrect use of the appliance shall invalidate any liability and warranty right by the Manufacturer.**



## BURN and INJURY HAZARD

- The temperature of the appliance's external surfaces may exceed 60°C, only touch control elements. Burn hazard!
- Pay attention to handling food containers during and after cooking: they might be very hot. Wear appropriate protective thermal clothing to prevent burns.
- During operation, with the door open, do not remove the fan cover; do not touch the moving fans and resistors which are still hot.
- **The maximum working height, referred to the highest surface level, must be 160 centimetres from the**

**floor. After installing the appliance apply the suitable adhesive symbol  (supplied) at a height of 160 centimetres.**

- To prevent boiling, do not use containers filled with liquids or food that liquefy with heat, in excessive amounts that cannot be easily kept under control. For this reason, only use trays that let you see inside the container. When extracting a tray containing hot liquid pay attention not to spill any liquid.



## ELECTRIC SHOCK HAZARD

- Before performing any cleaning on the appliance, disconnect the power supply (from the safety circuit breaker) and water supply (close the water cock). Let it cool completely.
- Any modification to the electrical system that might be required to install the appliance must be carried out by competent personnel only.
- The power supply system must be fitted with an effective earthing connection according to the regulations in force.
- In the permanent connection to the mains, a protective pole switch must be installed between the appliance and the mains with minimum opening between the contacts of overvoltage category III (4000V), sized for the load and complying with applicable regulations (automatic circuit breaker).
- If the power supply cable is damaged, it must be replaced by the manufacturer or their technical support service, or in any case by a person with similar qualifications, to prevent any risk.
- The appliance also has electrical components inside, for safety reasons it is forbidden to wash it with water or steam jets especially if aimed at the aeration vents on the metal surfaces of its outer casing.



## FIRE HAZARD

- No foods containing easily flammable substances must be cooked, such as alcohol-based foods; self-combustion phenomena might occur leading to fires and explosions in the cooking chamber.
- Before using the appliance, make sure that there are no non-compliant objects (e.g. User manuals, plastic bags or other flammable objects) or detergent residues, inside the cooking chamber.
- Always keep the cooking chamber clean. Cooking liquids (fats) or food residues may ignite!

## USER SAFETY

- The appliance is intended for professional use in institutional and professional kitchens and must only be used by skilled personnel who have been trained on its proper use. For safety reasons the appliance must be supervised during operation.
- The appliance is not intended to be used by children and/or persons with impaired physical, sensory or mental abilities, or who lack experience or knowledge, unless they are supervised by a person responsible for their safety, or who has been instructed on using the appliance.
- In the event of failure or poor operation, switch off the appliance, close the water supply cock, disconnect the power supply and contact an authorised Technical Support Centre.
- This appliance shall be used only for the purposes for which it was designed, meaning for all types of baking of pastries, baked goods and food: fresh and frozen; for reconditioning chilled and frozen food, for steam cooking meats, fish and vegetables. Any other use is considered improper.
- The noise level of the appliance in operation is less than 70 dB (A).

## INFORMATION FOR THE USER

- When the appliance is used for the first time it is recommended to run an empty cycle for 40/50 minutes at a temperature of 220/230°C. In this way all unpleasant yet fully normal smells due to heating the thermal insulation enveloping the cooking chamber and the silicone used for its external sealing are dissipated.
- Avoid prolonged permanence on the steel surfaces of foods containing acidic substances (lemon juice, vinegar, salt, etc.) which cause corrosive deterioration.
- The appliance must be cleaned regularly, even daily, to ensure the best functionality and to extend its service life.
- If specific detergents (degreasers) are used for cleaning stainless steel, ensure they do not contain corrosive acid substances (no presence of chlorine even if diluted) or abrasive substances. Carefully follow the instructions and warnings of the detergent's manufacturer and take precautions such as using adequate rubber gloves.
- Strictly avoid using scouring pads, steel wool and scrapers that may ruin the treated surfaces.

## COOKING TIPS

- In placing the food in the cooking chamber, maintain a space of at least 40 mm between trays in order not to excessively obstruct air circulation.
- Do not use trays with sides higher than necessary: the sides form barriers that prevent hot air circulation.
- Preheat the oven every time before cooking to achieve top performance.
- For cooking as consistently as possible, spread the food evenly in every tray taking into account its size, layer or thickness.
- Avoid adding salt to food in the cooking chamber.
- To check correct progress of the cooking cycle use the chamber's internal lighting: avoid uselessly opening the door, which causes wastes of energy and longer cooking times.

## RESIDUAL RISKS

- After baking open the door with caution, to avoid the violent outflow of heat which might cause burns.
- During oven operation pay attention to hot areas of its outer surfaces (marked on the appliance).
- Do not use the door handle to move the appliance (possible glass breakage).
- The supporting bench must be able to withstand the weight of the machine and house it correctly.
- The appliance is fitted with electrical parts and must never be washed with a water or steam jet.
- The appliance is electrically connected: disconnect the power supply before performing any type of cleaning.
- To avoid incorrect connections of the appliance, the relevant electrical/water connections are marked on the appliance by suitable identification plates.

## Only for wheeled models (MKF 1664 S – MKF 2011 S)

- After “pre-heating” the cooking chamber, it is necessary to act on the release device to actuate sliding (upwards) of the internal door glass (position to insert the tray trolley). During this procedure, appropriate heat protection clothing must be worn, **burn hazard!**
- Appropriate heat protection clothing must be worn when acting on the internal door glass after a cooking cycle to slide it downwards (washing position/cooking chamber pre-heating), **burn hazard!**
- Appropriate heat protection clothing must be worn when extracting the tray trolley from the oven after a cooking cycle, **burn hazard!**
- Ensure the tray trolley can be handled with ease, with no hindrance to insertion and extraction operations: any collision may cause the spillage of hot liquids or food, **burn hazard!**
- Close trays containing liquids so these cannot be spilled when they are hot, **burn hazard!**
- When the tray trolley is inserted in the oven, before closing the door ensure the release device for sliding the internal glass (door) has been activated and the glass is fully up: any impact of the trolley against the glass might break it, **injury hazard!**
- The trolley is fitted with a suitable rod for locking trays. The rod must always be inserted when the trolley is handled during use: trays might fall, **injury hazard!**
- If the tray trolley is not moved, the wheel parking brake must be engaged: the trolley might move on uneven floors, **injury hazard!**
- While loading and unloading the tray trolley, engage the wheel parking brake: the trolley might move, **injury hazard!**
- The tray trolley is mounted on wheels, therefore it might tip over if it is moved on uneven floors, **injury hazard!**
- When inserting or extracting the tray trolley into or from the oven, **pay the utmost attention not to accidentally damage the internal glass gasket** of the door: it is recommended to open the oven door completely while moving the trolley.

## 1. SERVIZIO TECNICO (TECHNICAL SERVICE)

- It is essential for this instruction manual to be stored together with the appliance for future referencing; in the event of misplacing it, a copy must be obtained directly from the manufacturer.
- This information has been prepared for your safety and that of others; therefore we kindly ask you to read it carefully before installing and using the appliance.
- For periodic maintenance checks and repairs, contact your nearest Technical Support Centre and only use original spare parts. Failure to comply with this provision shall forfeit the warranty right.
- All installation and commissioning operations must exclusively be performed by technically skilled installers, in compliance with the instructions of the Manufacturer and in compliance with national standards in force.
- The “technical data” plate is located on the side panel of the appliance.

**Note:** The inappropriate or incorrect use of the appliance and failure to comply with installation rules shall invalidate any liability by the Manufacturer.

## 2. INSTRUCTIONS FOR THE USER

### 2.1 Control panel

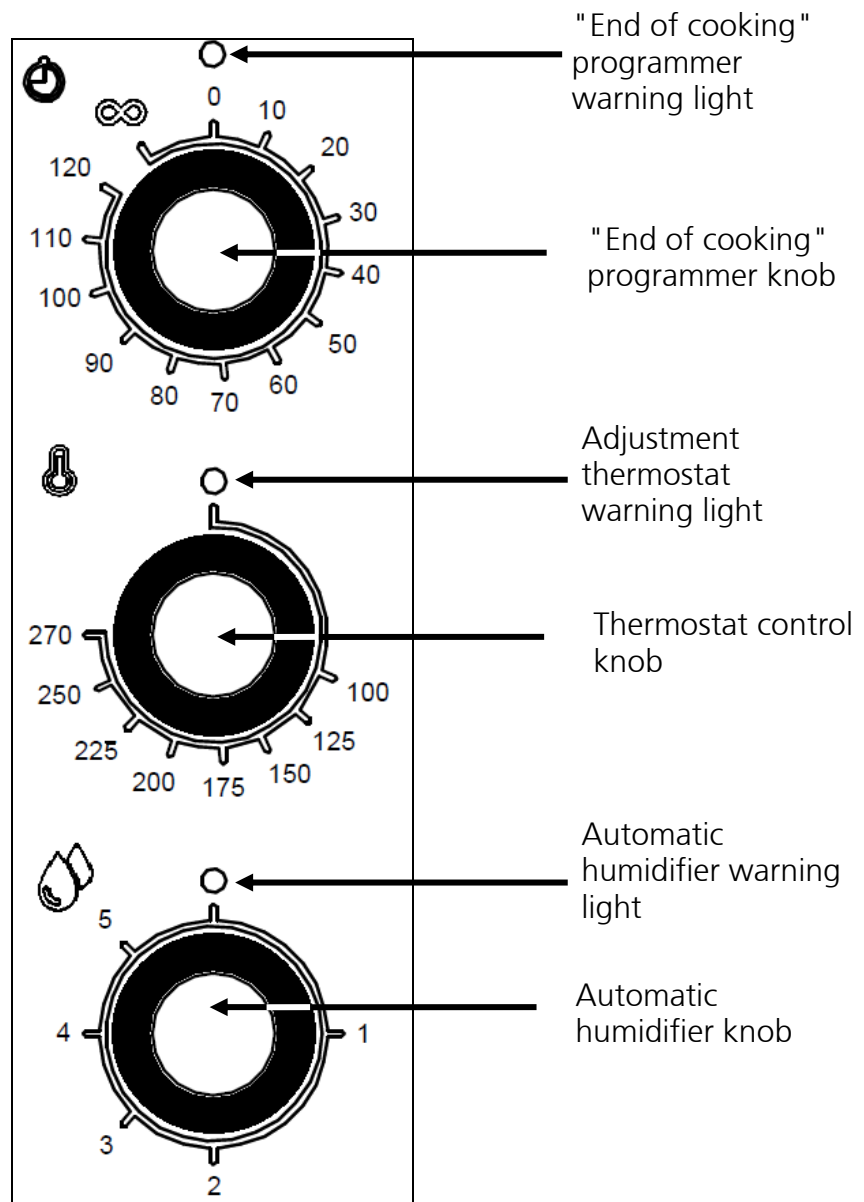



Fig.1

**Programming cooking time** - The oven is switched on by turning the programmer knob (Fig.1) to the  symbol (continuous operation) or to the selected cooking time (up to 120 minutes); in the latter case the end of cooking is signalled by the oven switching off automatically.

**Programming cooking temperature** - Turn the thermostat knob (Fig.1) to adjust the temperature selected for cooking.

**Programming humidity/steam quantity** - To generate humidity/steam during the operation of the oven (hot cooking chamber), turn the knob of the automatic humidifier (Fig.1) to the desired value (from 1 to 5). By turning the knob to the • (off) position the humidifier stops working.

#### Important

- By turning the knob to positions from "1" to "4" the humidifier works by generating humidity/steam (water is fed into the cooking chamber) at automatically adjusted and cyclically repeated time intervals. (A higher number corresponds to a longer time of humidifier operation, therefore greater steam production).
- Turning the knob to position "5" disables the automatic control of the humidifier which works by continuously feeding water into the cooking chamber (continuous humidity/steam production).
- Before turning on the automatic humidifier, stabilise the temperature inside the cooking chamber to a value of at least 120°C in order to optimise the production of humidity/steam.



**"End of cooking" programmer warning light** - The green light of the programmer (Fig.1) indicates that the oven is working and that the cooking time is active.

**Control thermostat warning light** - The orange warning light of the control thermostat (Fig.1) turns off every time the programmed temperature is reached in the cooking chamber. It switches on again when the thermostat is triggered to re-establish this temperature.

**Automatic humidifier warning light** - The orange warning light of the automatic humidifier (Fig.1) indicates that the water solenoid valve is operating and therefore humidity/steam is being produced in the cooking chamber.

**Internal oven light** - With the oven in operation, the internal light is always on.

**To turn off the oven** - Place the "end of cooking" programmer and thermostat knobs in the off position. After use, close the water shut-off tap upstream of the appliance and disconnect it from the power supply.

## 2.2 Wheeled models (mod. MKF 1664 S - MKF 2011 S)

These models are equipped with a special mobility system (patented) of the **internal door glass**. The system allows you to "slide" **the internal glass down or up**, according to the application needs.

### **Glass "down"**

To obtain this position the oven door must be completely opened and by exerting adequate force, "slide" the internal door glass down until the mechanical "lock" device is engaged: the closing "click" can be heard (Fig. 2).

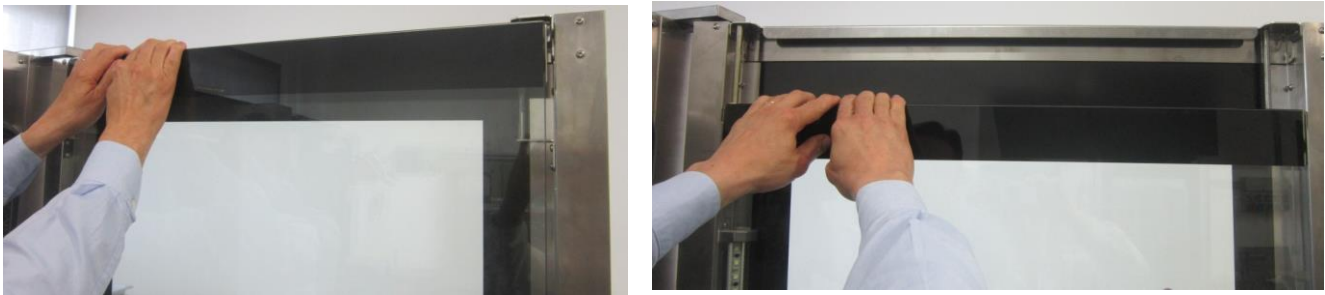


Fig. 2

### Glass "up"

To obtain this position, the oven door must be opened (even partially) and by acting on the suitable "lever" in the lower portion (right side) of the door, behind the external glass, activate the "release" device to let the internal glass "slide" up automatically.

#### **Important**

If the internal glass "release" operation is performed before using the oven (cooking chamber still cold), it is recommended to completely open the door and act on the suitable "lever" from the inside of the door (fig. 3). If the internal glass "release" operation is performed after using the oven (cooking chamber is hot), it is recommended to partially open the door, let the hot air vent off, and act on the suitable "lever" from the outside of the door using adequate heat protection clothing (fig. 4).

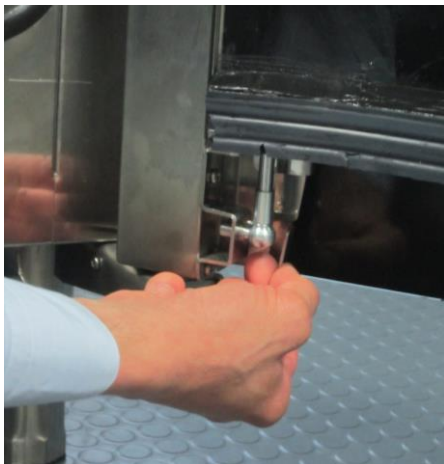


Fig. 3



Fig. 4

### Glass "down" without tray trolley inserted

This position of the internal door glass lets the cooking chamber be hermetically closed without the presence of the relevant tray trolley in or without needing to use a suitable closing partition. The oven can be used for the PRE-HEATING function **without tray trolley inserted** or for the SEMI-AUTOMATIC CLEANING function (paragraph 3.2).

### Glass "down" with tray trolley inserted

When the tray trolley is inserted, an audible alarm is activated and repeated intermittently. This internal glass position with the tray trolley inserted, **does not allow the door to be closed. If the trolley hits against the glass it might break it: injury hazard!**

### Glass "up" without tray trolley inserted

This internal glass position without the tray trolley inserted, **does not let the oven be used in any way.**

### Glass "up" with tray trolley inserted

The oven can be used regularly for cooking.

#### **Warning**

Adequate heat protection must be worn if the internal glass is moved after completing the "pre-heating" step or after a cooking cycle, **burn hazard!**

## 2.3 Baking

For cooking, pre-heat the oven to the desired temperature before inserting the food. When the oven has reached the required temperature, introduce the food and check the cooking time. Turn off the oven 5 minutes before the theoretical time to recover the stored heat.

- **Convection cooking (dry heat)** - Switch the oven on and turn the thermostat knob to the desired temperature.
- **Convection cooking + humidity/steam (dry heat + damp heat)** - Switch the oven on. Turn the thermostat knob to the desired temperature and the automatic humidifier knob to the selected amount of humidity/steam.
- **Defrosting** - Switch the oven on and turn the thermostat and automatic humidifier knobs to off (•).

## 3. CLEANING

### 3.1 Manual cooking chamber cleaning

For hygienic reasons it is good practice to clean the cooking chamber on a daily basis, at the end of every day the oven is used. Correct cleaning also prevents the formation of corrosive phenomena inside the chamber, as well as preventing the danger of accidental combustion due to any grease and food residues accumulated over time.

To aid cleaning remove the side grilles. The cleaning detergents must not contain abrasive substances or substances of acid/corrosive nature. In case of lack of appropriate detergents it is sufficient to clean the cooking chamber with a sponge soaked in warm soapy water or warm water and a little vinegar. Rinse with plenty of water (use the suitable shower if available) and dry well with a soft cloth. The side grilles must be cleaned separately and fitted back on. When cleaning is completed leave the oven door slightly open.

### 3.2 Semi-automatic cooking chamber cleaning

Spray specific degreaser for stainless steel on the internal walls of the cooking chamber, on the side grilles, on the fan covers (do not spray onto the fans through the grille) and on the internal door glass.

Let the product act for about 20 minutes with the door closed.

switch the oven on adjusting the temperature at 100-120°C.

Run a cycle with 100% steam (automatic humidifier knob in position "5") for about 15 minutes.

Upon completing the cycle switch off the oven, let the cooking chamber cool and rinse it with plenty of water (use the suitable shower if available).

Dry by running a heating cycle adjusting the temperature at 180-200°C for about 10 minutes (repeat the cycle if necessary).

When cleaning is completed leave the oven door slightly open.

### Warning

Only for mod. MKF 1664 S and mod. MKF 2011 S (wheeled models) perform the semi-automatic cleaning cycle with the internal door glass in the "glass down" position.

### 3.3 Cleaning the fans

The fans must be regularly cleaned with appropriate descaling products. All their parts must be thoroughly cleaned, eliminating any limescale. The fan cover must be removed to access fans. When cleaning is completed fit the cover back on operating in reverse order.

### 3.4 Cleaning the door gasket

For hygienic and functional reasons it is good practice to clean the door gasket at the end of every day the oven is used. It must be accurately washed with warm soapy water. It must be rinsed and dried with a soft cloth. Any scaling or food residues must be removed with special care, without using sharp metal tools that might irreparably damage the gasket.

### 3.5 Cleaning the door

The internal glass of the cooking chamber door may be cleaned using the same type of degreaser used for manually cleaning the cooking chamber; otherwise, a normal (non toxic) glass cleaning product may be

used. A common glass detergent may be used also to clean the external door glass. In any case one may simply use warm soapy water. After rinsing dry the glass surface well with a soft cloth.  
Should opaque spots form between the two glass panes, these may be removed as they are inspectable.

### 3.6 Cleaning the external casing

The outer steel surfaces must be cleaned with a cloth soaked in warm soapy water or mixed with a little vinegar, they must be rinsed well and dried with a soft cloth.

Should you wish to use specific products on the market, these must comply with the cleaning requirements set out in the "Information for the user" paragraph.

It is worth remembering that the counter supporting the appliance, or the floor surrounding the appliance area, should also be cleaned without using acid corrosive substances (e.g. muriatic acid) since the vapours released by them might corrode and deteriorate the outer steel shell and cause irreparable damage to the electrical components inside the appliance.

### 3.7 Inactivity period

Should the appliance not be used for a long extent of time, it is good practice to disconnect it from the power supply (act on the safety magnetic circuit breaker located upstream of the appliance) and water supply. It is recommended to clean it with care internally (cooking chamber) and externally, paying special attention to removing any salt residues which might lead to corrosion on the steel surfaces.

It is also recommended to protect the appliance with oil-based spray products (e.g. Vaseline oil) which form an effective protective film when sprayed on the surfaces.

Leave the door of the cooking chamber ajar.

Adequately covering the appliance, finally, allows it to be protected from dust.

## 4. TROUBLESHOOTING

Type of fault	Cause of the fault	Corrective action
Control panel warning lights totally off (The oven does not work)	- Non-compliant connection to the power mains	- Check the connection to the mains
	- No mains voltage	- Restore the power supply voltage
	- Safety thermal device triggered	- Restore the safety thermal device
Cooking cycle set: the oven does not work	- Door open or ajar	- Close the door properly
	- Door sensor damaged	- Contact a skilled technician
Automatic humidifier active: no humidity/steam production in the cooking chamber	- Non-compliant water mains connection	- Check the connection to the water mains
	- Closed stopcock	- Check the cock
	- Obstructed water inlet filter	- Clean the filter
	- Damaged water inlet solenoid valve	- Contact a skilled technician
Closed door: steam escapes through the gasket	- Non-compliant gasket assembly	- Check gasket assembly
	- Damaged gasket	- Contact a skilled technician
	- Handle "nose" adjusted incorrectly	- Contact a skilled technician
The oven does not cook evenly	- One of the motors is down or operates at low speed	- Contact a skilled technician
	- The motors do not reverse direction	- Contact a skilled technician
	- Resistor not powered or damaged	- Contact a skilled technician
Lamp (LED) in the cooking chamber does not work	- Lamp (LED) damaged	- Replace the lamp (LED)
The thermal safety device is activated continuously	- Damaged device	- Contact a skilled technician
	- Control thermostat damaged	- Contact a skilled technician

## 5. TECHNICAL SUPPORT

Before leaving the factory this appliance has been calibrated and tested by experienced and skilled personnel in order to obtain the best operating results. Any repair or calibration must be carried out with the utmost care and attention, using only original parts.

That is why it is required to always contact the Dealer who has sold the appliance or our nearest Technical Support Centre, specifying the kind of failure and the model of the appliance you have. The parts required for adaptation to different types of gas are provided with the appliance hence supplied upon sale or delivery.

For servicing needs the user may contact Tecnoeka on the numbers shown on the cover, or refer to the website [www.tecnoeka.com](http://www.tecnoeka.com).

## 6. DISPOSAL OF THE APPLIANCE

In accordance with Directive 2012/19/EU on the disposal of waste electrical and electronic equipment, the crossed-out wheeled bin symbol on the equipment indicates that the product was placed on the market after 13 August 2015, and that at the end of its service life it must be disposed of separately from other waste.

At the end of the appliance's service life, the user must, therefore, deliver it to the appropriate centres (recycling centres) for the separate collection of electrical and electronic waste.

All TECNOEKA appliances are made of recyclable metal materials (stainless steel, galvanised sheet metal, iron, copper, aluminium, etc.) which make up more than 90% of the total weight of the appliance. Before disposing of the appliance, it is recommended to make it unusable by removing the power supply cable and removing the mechanism for closing compartments and/or openings, if any.

The separate waste collection and subsequent treatment, recovery and disposal, are conducive to the production of equipment with recycled materials and reduce the negative effects on the environment and health possibly caused by incorrect waste handling. Illegal disposal of the product by the user entails the application of administrative penalties.



## 7. CONVENTIONAL WARRANTY

The Tecnoeka product is designed for food use only and is covered by warranty according to law (art. 1490 and subsequent articles of the Italian Civil Code) for Professional Customers or customers who purchase from the Dealer with a VAT number. The Tecnoeka product is professional and certified according to IEC EN 60335-1 and can only be sold to professional users.

With the exclusion of any additional warranty, the Vendor agrees to repair, at its sole discretion, only those parts of the products that prove to be tainted by an original fault as long as, subject to forfeiture, the customer has reported the fault within 12 months from the date of purchase and reported the defect within 8 days from the date of discovery, in writing, attaching a copy of the invoice, receipt or tax receipt as proof of purchase.

Including the event in which the customer is unable to produce the invoice, receipt or tax receipt proof of purchase or the terms outlined above are not complied with, the warranty is expressly forfeited in the following cases:

- 1) Faults or breakdowns of components caused by transport.
- 2) Damage deriving from inadequate electrical, hydraulic and gas supply systems compared to that provided in the installation manual, or anomalous operation of the same.
- 3) Damage deriving from the incorrect product installation, or installation not in accordance with the installation manual and, in particular, damage due to inadequacy of the flues and drains to which the product itself is connected.
- 4) Use of the product for purposes other than its intended use, as specified and resulting from the technical documentation issued by Tecnoeka.
- 5) Damage due to the use of the Product not in accordance with the instructions in the use and maintenance manual.
- 6) Tampering with the product.
- 7) Product adjustment, maintenance and repair interventions carried out by unqualified personnel.
- 8) Use of non-original spare parts or not authorised by Tecnoeka.
- 9) Damage or defects caused by negligent and/or imprudent use of the product, or in contrast with the instructions prescribed by the use and maintenance manual.
- 10) Damage caused by fire or other natural events and, in any case, by fortuitous events or any other cause beyond the manufacturer's control.
- 11) Damage to components subject to normal wear that require to be periodically replaced.

Also excluded from the warranty: painted or enamelled parts, knobs, handles, mobile or removal plastic parts, light bulbs, glass parts, gaskets, electronic parts and any accessory parts and transport from the consumers, final user and/or purchases location to Tecnoeka srl and vice versa. Replacement costs of the oven and relative installation expenses are also excluded from the warranty. The warranty does not cover Products purchased as used or from third parties who are not connected to or authorised by Tecnoeka.

TECNOEKA SRL shall not be held liable for damage, either direct or indirect, caused by a product fault or as the result of the forced suspension of operation.

Repairs under warranty do not result in the extension or renewal of coverage.

Components replaced under warranty are, in turn, covered by a 6-month warranty from the shipping date, certified by the transport document issued by Tecnoeka.

No-one is authorised to change the warranty terms and conditions or to issue others, neither verbal nor written.

## **8. AVAILABILITY AND SUPPLY OF SPARE PARTS**

Tecnoeka srl keeps and ensures the availability of spare parts for a maximum of 24 months from the date of sale of the finished product to the dealer. Availability cannot be guaranteed after said period.

## **9. APPLICABLE LAW AND COMPETENT COURT**

Supply relationships will be governed by Italian law, with the express exclusion of the private international law standards and the Vienna Convention on Contracts for the International Sale of Goods of 11.4.1980. Any dispute will be settled exclusively by the Court of Padua.

Without prior notice and liability for Tecnoeka Srl, the products presented in the manual may be subject to technical and design changes for the purposes of improvement, without affecting the essential features relating to operation and safety. Tecnoeka Srl shall not be held liable for any inaccuracy due to printing or clerical errors affecting instruments, and in the technical and commercial description of its products to customers.





**Tecnoeka srl**

via Marco Polo, 11 - 35010 Borgoricco, Padova - Italy  
Tel. +39.049.5791479 - Tel. +39.049.9300344

**email**

info@tecnoeka.com - tecnoekasrl@pec.it

**web site**

tecnoeka.com